


ASSEMBLY INSTRUCTIONS topshelf (PT-26-NC)

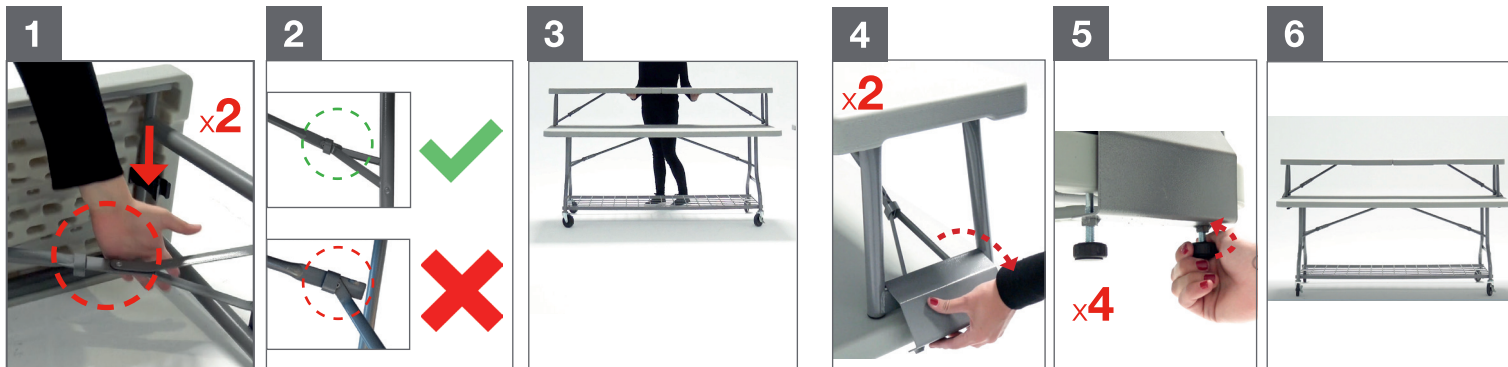

EN - To unfold

ES-Para desplegar / FR-Déplier / DE-Zum Ausklappen / IT-Aprire / PT-Para desdobrar / CA-Per desplegar / NL-Uitklappen / PO-ROZŁOŻENIE / RO-Extindere / BG-За разгъване / HU-Kinyitni
EL-Για να ανοίξετε / TR-Açmak için / ع- للفتح / TH-วิธีการกางเพื่อใช้ / RU-Разложить / SV-Fäll upp / DA-Udklaping / NO-Brette ut / CS-Rozložit / SR-Da se rasklopi / HR-Rasklopiti /
JA-広げる。/ZH-展开 / LT-Išskleisti / SK-Pre rozloženie / לקפל - HE




PUSH



EN - To fold

ES-Para plegar / FR-Plier / DE-Zum Einklappen / IT-Piegare / PT-Para dobrar / CA-Per plegar / NL-Inklappen / PO-ZłOŻENIE / RO-Pliere / BG-За сгъване / HU-Összecsuni /
EL-Για να κλείσετε / TR-Katlamak için / ع- للفتح / TH-วิธีการจัดเก็บ / RU-Сложить / SV-Fäll ihop / DA-Sammenklapning / NO-Brette sammen / CS-Složit / SR-Da se sklopi / HR-Skllopiti /
JA-折りたたむ。/ZH-折叠 / LT-Suskleisti / SK-Pre zloženie / לקטוע'פול - HE

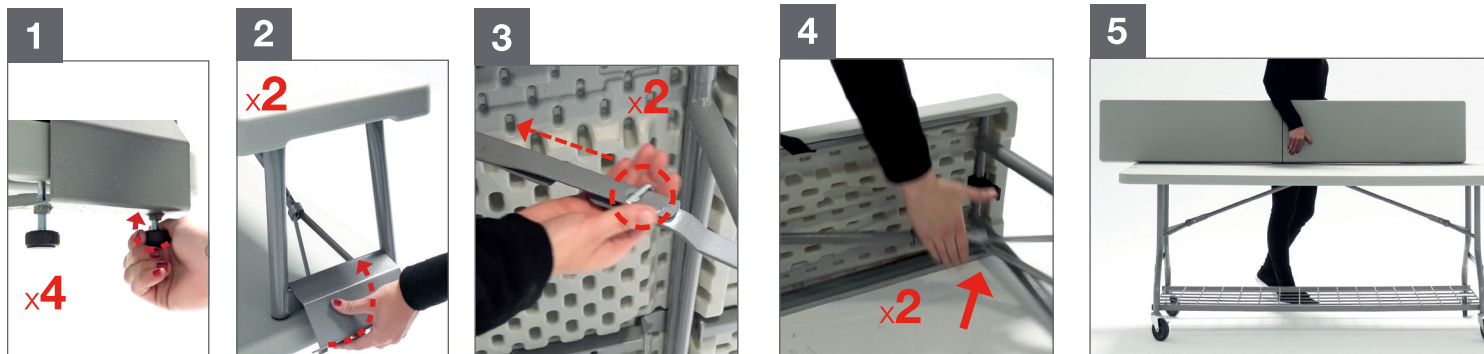

PUSH